 


**RCU500**

Universal Remote Control

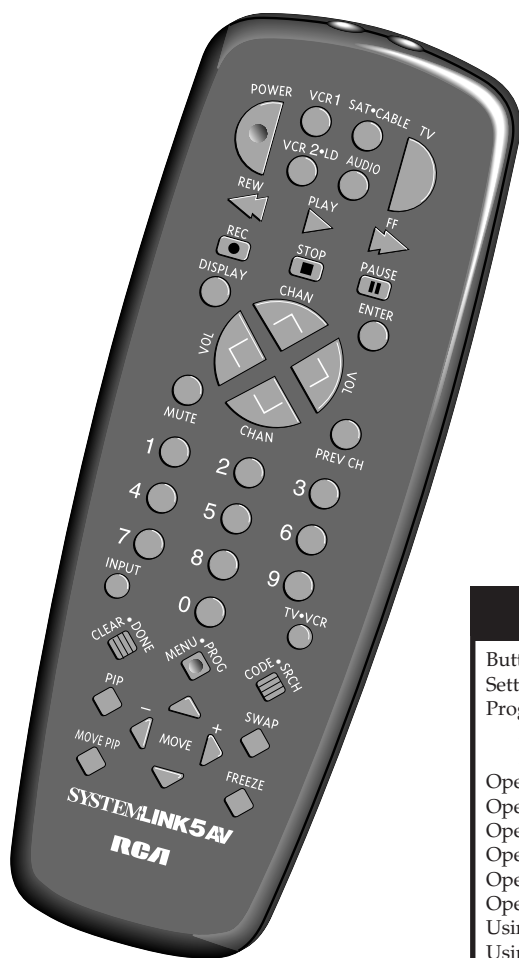

This Universal Remote Control is compatible with most models of infrared controlled Televisions, VCRs, Cable Boxes, Satellite Receivers, and Audio Equipment manufactured after 1989. Please retain this guide for future reference.

90 Day Warranty

TABLE OF CONTENTS

Button Description	2
Setting Up Your Universal Remote	3
Programming Your Universal Remote	
Programming with Code Search	4
Programming with Code Lists	5
Operating Your TV	6
Operating Your Cable Box	7
Operating Your Satellite Receiver	7
Operating Your VCR	8
Operating Your Laserdisc Player	9
Operating Your Audio Equipment	9
Using the Menu Functions for RCA TV's	10
Using the Menu Functions for Other TV's	10
Operating Your TV/VCR Combo Unit	11
Special Operations	11
Code Lists	
TV	12
VCR	13
Laserdisc Player	14
Satellite Receiver	14
Cable Box	14
TV/VCR Combinations	14
Audio Equipment	15
90 Day Warranty	Inside Card

Button Description

Device Buttons (VCR1, VCR2•LD, SAT•CABLE, AUDIO, TV)

Determines which device you are controlling. The VCR2•LD and SAT•CABLE buttons can be assigned to one of the two devices listed. For example, VCR2•LD can be assigned to either a VCR or a Laserdisc Player.

VCR Buttons (TV/VCR, REW, PLAY, FF, REC, STOP, PAUSE)

Use these buttons to control playback from a VCR or Laserdisc Player. Also used to record onto a VCR tape.

ENTER (Also SKIP for some RCA, GE, and ProScan TV's)

Use this button for two functions. Use as ENTER when programming using CODE SEARCH or when entering channel numbers for some TVs. Use as SKIP to look at other channels during commercial breaks. Press SKIP repeatedly to select the commercial time to skip. Change channels and TV will return to original channel when time runs out.

Channel and Volume (DISPLAY, VOL, CHAN, MUTE, PREV CH)

Use these buttons to control sound and channel changes.

Number Buttons (0-9)

Use these buttons to directly enter channel numbers for a TV, VCR and Cable Box or for accessing preset channels of an AM/FM tuner or enter disk and track numbers for a CD player. Also used for entering program code numbers from brand lists.

Menu Buttons (MENU•PROG, MOVE, -, +, UP, DOWN)

Use these buttons to adjust on-screen menu features and programming information.

Code Search Button

Programs devices by searching through brand codes. Use when code lists are not available or when the listed code does not work with your device. *See page 4.*

PIP Buttons (PIP, MOVE PIP, SWAP, FREEZE)

 
Use these buttons to adjust the Picture-in-Picture feature if it is available on your TV.



Setting Up Your Universal Remote

Place Batteries in the remote


1. Remove the battery compartment cover.
2. Place 4 AAA batteries as shown, matching the + and – end of each battery as indicated in the battery compartment.
3. Replace the cover.

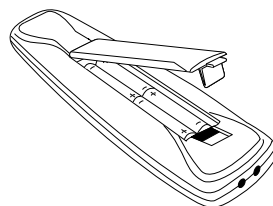

Determine if your remote needs programming

Some RCA, GE and ProScan devices may already be preprogrammed.

 1. Press the button of the device you want to control (for example TV).
2. If the device turns on, press another button to confirm (for example CHANNEL UP).
3. If the device you selected (TV) responds, you will not need to program the remote. If the device you selected (TV) does not respond, you will need to program the remote (See pages 4-5 for programming instructions).
4. Repeat steps 1-3 for other devices.



Programming Your Universal Remote

The remote may already be set-up to operate your brand of TV, VCR, Laserdisc, Satellite Receiver, Audio Equipment, or Cable Box. It is preprogrammed with the following codes: TV-000, VCR1-000, AUDIO-003, SAT•Cable Box-000, and Laser Disc Player-037. For brands that require programming, there are two ways to program: Using Code Lists or Code Search. Use Code Search if the code lists are not available or if the codes from the lists do not operate a device.

 
Programming a Device using **CODE SEARCH**

1. Manually turn on your device (TV, VCR, Laserdisc Player, Satellite Receiver, Cable Box or Audio Equipment).
2. Press and hold **CODE•SRCH**.

PRESS
& HOLD



3. Press and release the device button you want to set up (TV, VCR1, VCR2•LD, SAT•CABLE, or AUDIO).



4. Release **CODE•SRCH**.

RELEASE



5. Press **POWER** repeatedly until the device turns off (you may have to press up to 100 times).



6. Once the device turns off, press and release **ENTER**.



7. With the device on, press another button, for example **CHANNEL UP**. If the device responds, no further programming is required. If the device does not respond, repeat steps 1-7.



Programming Your Universal Remote

Programming a Device using CODE LISTS

- Find codes for each device and brand on page numbers shown below.

<u>Device</u>	<u>Page</u>
TV	12
VCR	13
LaserDisc Player	14
Satellite Receiver	14
Cable Box	14
Audio Equipment	15

- Press and hold the **TV**, **VCR1**, **VCR2•LD**, **SAT•CABLE**, or **AUDIO** button you want to set up. **SAT•CABLE** can be programmed to operate other Satellite Receivers.

 
 
- Enter the three digit code from the TV, VCR, Laserdisc Player, Satellite Receiver, Cable Box, or Audio code list.

- Release the device key.


- With the device on, press another button, for example **CHANNEL UP**. If the device responds, no further programming is required. If the device does not respond, repeat 2-4 using another code.

- Enter your device codes here for easy reference.

PRESS
& HOLD

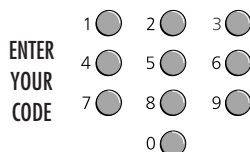

RELEASE

 

TV CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

VCR1 CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

VCR2•LD CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>



SAT•CABLE CODE		
<input type="text"/>	<input type="text"/>	<input type="text"/>

AUDIO		
<input type="text"/>	<input type="text"/>	<input type="text"/>

Operating Your TV

Turning the TV On and Off.

  1. Press **TV** to set the remote to control the TV (Most RCA, GE and ProScan models will only turn on when TV is pressed, not POWER.)
2. Press **POWER** to turn the TV on or off.

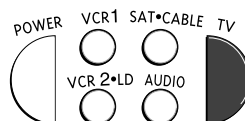

Change Channels on the TV

Press **CHANNEL UP** or **CHANNEL DOWN** to change channels on the TV or enter the channels as you would normally for your TV.

Use the buttons below to adjust features on your TV.

DISPLAY– Shows displays on the screen and clears menus from the screen.

MUTE – Switches the TV sound on or off.

PREV CH (PREVIOUS CHANNEL) – Changes back and forth between two channels. Select a channel using the number buttons and then select another. Press **PREV CH** to switch between the two channels.

DISPLAY



MUTE



PREV CH

 
If your TV has picture-in-picture, you may be able to use the following buttons to adjust PIP.

PIP (PICTURE-IN-PICTURE) – Turns the small picture on or off.

MOVE PIP – Moves the small picture to the next corner.

SWAP – Switches the channel in the small picture with the big picture.

FREEZE – Freezes or unfreezes the small picture.


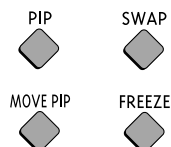


You may want to experiment with the remote to determine all the buttons which will work with your TV.

Operating Your Cable Box

Turning the Cable Box On and Off.

  1. Point the remote at the cable box and press **SAT•CABLE**.
2. Press **POWER** to turn it on or off.

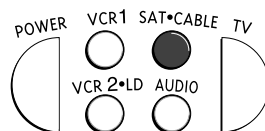


Changing Channels on the Cable Box.

Press **CHANNEL UP** or **DOWN** to change channels on the cable box or enter the channel as you would normally for your cable box.




Operating Your Satellite Receiver

 1. Point the remote at the Satellite Receiver, press **SAT•CABLE**, and follow the directions.

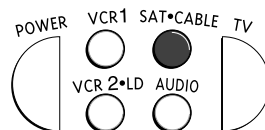


To Operate the Program Guide

 1. Press **MENU•PROG**.
2. Press **1** to select Program Guide.
3. Move through the Program Guide with the navigation keys.
4. Make your selection by pressing **DISPLAY**.



Turning the Satellite Receiver On and Off.

 1. Point the remote at the Satellite Receiver and press **SAT•CABLE**.
2. Press **POWER** to turn it on or off.

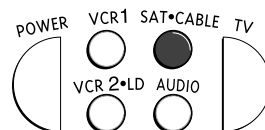


You may want to experiment with the remote to determine all the buttons which work with your Satellite Receiver.

Operating Your VCR

Turn the VCR On and Off.

 1. Press **VCR1** or **VCR2•LD** to set the remote to control the VCR. (Most RCA, GE and ProScan models will only turn on when pressing VCR not POWER).

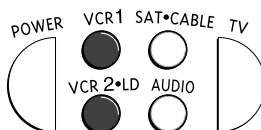

2. Press **POWER** to turn the VCR on or off.



 
Using the VCR function buttons.

1. Turn on the VCR.
2. Insert a tape in the VCR.
3. Press **PLAY** to start the tape.
4. Press **STOP** when you are finished.
5. Press **REW** to rewind the tape.
6. Press **PAUSE** to pause the tape.




Record one channel and watch another.

1. Press **VCR1** or **VCR2•LD** to set the remote to control the VCR.

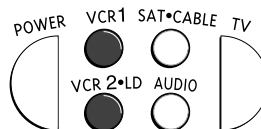

 2. Tune the VCR to the channel you want to record.

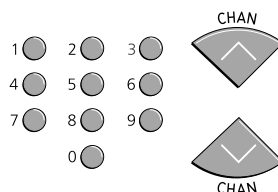

3. Press **REC** to start recording.



4. Press **TV/VCR**.



5. Press **TV** to set the remote to control the TV.



6. Press **CHANNEL UP** or **DOWN** to change channels on the TV.

 


7. To see the channel you are recording, tune the TV to channel 3 or 4 (same as CH3/4 switch on the VCR). Tune to 90, 91, or 92 for some RCA, GE or ProScan products.

Operating Your Laserdisc Player

Turn the Laserdisc Player On and Off.

1. Press **VCR2•LD** to set the remote to control the Laserdisc Player.

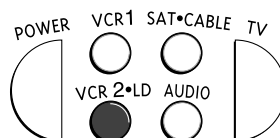

2. Press **POWER** to turn the Laserdisc Player on or off.



Using the Laserdisc Player function buttons.

1. Turn on the Laserdisc Player.
2. Place a disc in the Laserdisc Player.
3. Press **PLAY** to start the disc.
4. Press **STOP** when you are finished.
5. Press **PAUSE** to pause the disc.

 


You may want to experiment with the remote to determine all the buttons which work with your Laserdisc Player.

Operating Your Audio Equipment

Turn the Audio Equipment On and Off.

1. Press **AUDIO** to set the remote to control the Audio Equipment. (Most RCA, GE and ProScan models will only turn on when pressing AUDIO not POWER).
2. Press **POWER** to turn the Audio Equipment on or off.

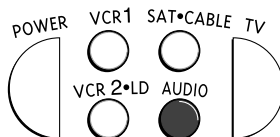


Using the Audio function buttons.

You may want to experiment with the remote to determine all the buttons which work with your Audio Equipment.


Using the Menu Functions for RCA Televisions

RCA, GE, and ProScan televisions use three different menu systems. Read the following descriptions, and choose the one that matches your TV.

 System 1: If you use **MENU**, **+**, and **-** buttons on your current remote, substitute them with **MENU•PROG**, and the **+** and **-** (arrow) buttons on this remote, and refer to your TV owner's manual for operating instructions. The remote is already set-up to operate this menu system. Program the remote with TV code 101.

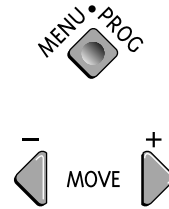

System 2: If you use **MENU**, **CHANNEL UP**, **CHANNEL DOWN**, **VOLUME UP**, and **VOLUME DOWN** buttons on your current remote, substitute them with **MENU•PROG**, and the (arrow) buttons on this remote, and refer to your TV owner's manual for operating Instructions.

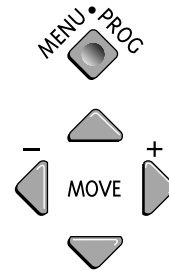 


System 3: If you use **SETUP**, **VIDEO**, **AUDIO**, **+**, and **-** buttons on your current remote, substitute them with **MENU•PROG**, (up arrow), (down arrow), and the **+** and **-** (arrow) buttons on this remote, and refer to your TV owner's manual for operating instructions.

MENU/PROG = SETUP

UP = AUDIO

DOWN = VIDEO

 The remote must be programmed with TV code 109. Refer to the procedure on page 5.

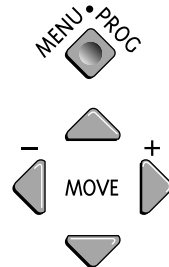

Using the Menu Functions for Other Televisions

You will have to experiment with the remote to determine the buttons which will work with your TV.

Operating Your TV/VCR Combo Unit

Some TV/VCR combination units may be controlled by using a combination of TV and VCR codes. For example, the Samsung TV/VCR combo unit may be controlled by both the Samsung TV code and the Samsung VCR code.

Special Operations

RCA, GE and PROSCAN Brand Devices:

Many of these devices (TVs and VCRs) will not need to be programmed. In the event that programming is required, the code search method is suggested. Note: With these brands, the device button (TV, VCR1, VCR2•LD, AUDIO) will usually turn the units on. The POWER button will only turn off the device, if you used the TV, VCR1 or AUDIO button to turn the unit on.

SCIENTIFIC ATLANTIC Cable Boxes:

This brand of cable box can be programmed using the code search method by using the **CHANNEL UP** key rather than **POWER** during Code Search. NOTE: The device must be turned on prior to beginning the code search. Once the device turns off, press and release **ENTER**.

In most cases this cable box can be turned on and off using the **CHANNEL UP** key not the **POWER** button. If the unit will not turn on using the **CHANNEL UP** key, then manually turn it on and only partial compatibility will be achieved.

JERROLD or GENERAL INSTRUMENTS Cable Boxes:

These units can be programmed using the code search method. In some cases, these devices will change channels during the code search. Continue until the unit turns off, then press and release **ENTER**.

ZENITH and OAK Cable Boxes

Some Zenith and Oak Cable Boxes require pressing **CHANNEL DOWN** rather than **ENTER** after numeric entry.

TV Code List

A-Mark	102	MTC	011,019,027
Admiral	005	Multivision	081
Amtron	064	NAD	018,023
Akai	002,103	NEC	011,014,019,027,038,084
Anam	104,105	Panasonic	012,013,038,086,111
Anam National	038,106	Penney	000,008,011,019 027,040,068,077,086,088
AOC	011,019,027,088,107	Philco	006,007,010,011,013,016,019 027,033,035,037,038,043,087,089
Bell & Howell	005	Philips	002,006,007,010,011,013,016 033,035,037,038,043,066,073
Candle	011,027,033	Pioneer	011,027,045,062,093
Citizen	011,027,033,064	Portland	011,019,027,037
Colortyme	011,027,084	ProScan	000
Concerto	011,027	Proton	011,027,037,072
Contec/Cony	036,037,040,042,064	Quaser	012,038,092
Craig	064	Radio Shack	000,021,025,036 037,059,064,078
Curtis Mathes	000,011,015,027,037	RCA	000,006,011,019,027,034 038,044,046,088,100,101,109
CXC	064	Realistic	021
Daewoo	011,019,027,0112	Sampo	011,027
Daytron	011,027	Samsung	006,011,014,015 019,027,036,037,077,110
Dimensia	000	Sanyo	017,021,039,056,057,058
Electrohome	006,011,014,027,038 061,068	Scott	028,037,064
Emerson	011,026,027,028,029,030 031,032,037,042,053,064,065 067,075,076,078,079,091,094,095,096	Sears	000,006,011,014,017,018,021 023,027,039,040,041,051,071,083,095
Envision	011,027	Sharp	011,020,025,027,037 052,053,059,060,108
Fisher	017,021,039,041	Signature	005,094
Funai	064	Sony	002
GE	000,008,009,011,012,027 038,068,086,089,091	Soundesign	011,027,033
Goldstar	003,004,006,011,019 027,037,050	Sylvania	006,007,010,011,013,016,027 033,035,043,049,066,087,089
Hallmark	011,027	Symphonic	064,076
Hitachi	009,011,027,036,037,040 047,048,063,080,094,097,098	Tatung	038
Infinity	013	Technics	012
JBL	013	Techwood	011,027
Jensen	011,027	Teknika	011,019,027,033 036,037,040,066
JVC	012,024,036,037,040,048,051,074	Telecaption	090
Kawasho	002,011,027	TMK	011,027
Kenwood	006,011,014,027	Toshiba	018,021,023,040 071,077,085,090
Kloss Novabeam	035,043	Universal	008,009
KTV	078	Victor	051
Loewe	013	Vidtech	019,027
Luxman	011,027	Wards	000,005,006,007,008 009,010,011,013,019 025,027,028,035,043 059,066,076,082,089
LXI	000,013,018,021,023,054	Yamaha	006,014,019,027
Magnavox	006,007,010,011,013,016 027,033,035,043,049,066,087,089	Zenith	001,099
Marants	013		
Marantz	011,013,027,069		
Memorex	005		
MGA	006,011,014,019,022 027,041,056,061,068		
Mitsubishi	006,011,014,019,022 027,041,055,056,061,068		

VCR Code List

Admiral	006	Montgomery Ward.....	006
Aiwa	015	MTC	007,015
Akai	003,017,022,023,063,066	Multitech.....	007,015,031,032
Audio Dynamics.....	014,016	NEC	002,014,016,030
Bell & Howell.....	002		044,046,059,061,064
Broksonic	010	Panasonic	008,053,075,077
Candle	007,009,013,044,045	Pentax.....	005,035,044
	046,052	Pentex Research.....	046
Canon	008,053	Philco	008,029,053,056
Capehart.....	001	Philips.....	008,029
Citizen	007,009,013,044,045	Pioneer	005,016,033,050
	046,052	Portland.....	044,045,052
Colortyme	014	ProScan.....	000
Craig	007,012	Quartz.....	002
Curtis-Mathes.....	000,007,008,014	Quasar	008,053
	015,044,046,053,064,067	RCA	000,005,007,008,028
Daewoo	013,045,052,076		035,037,054,069
DBX.....	014,016	Radio Shack/Realistic.....	002,006
Dimensia	000		008,009,012,015
Dynatech	015		019,027,043,053
Electrohome.....	027	Samsung.....	007,013,022,032,042
Emerson	008,009,010,013,015	Sansui	016,071
	020,023,027,034,041	Sanyo	002,012
	042,047,049,057,062	Scott	004,013,041,049,068
	065,067,068,070	Sears.....	002,005,009,012,018
Fisher	002,012,018,019		019,035,043,048
	043,048,058	Sharp.....	006,024,027,039,045
Funai.....	015	Shintom	017,026,031,035,55
GE	000,007,008,032,037,053	Signature.....	015
Goldstar.....	009,014,046,060	Sony	017,026,038
Harman Kardon.....	014	Sylvania.....	008,015,029,053,056
Hitachi	005,015,035,036	Symphonic.....	015
Instant Replay	008	Tandy.....	002,015
JCL	008	Tashiko	009
JC Penney.....	002,005,007,008,014	Tatung	030
	016,030,035,051,053	Teac.....	015,030,069
JVC.....	002,014,016,030,044,046	Technics.....	008
Kenwood..	002,014,016,030,044,046	Teknika.....	008,009,015,021
KLH	073	Toshiba	005,013,019,048,049
Lloyd.....	015	Totevision	007,009
Logik.....	031	TMK.....	067
Magnavox	008,029,053,056	Unitech	007
Marantz	002,008,014,016,029	Vector Research	014,016,044
	030,044,046,061	Victor	016
Marta	009	Video Concepts.....	014,016,044
MEI	008	Videosonic	007
Memorex	008,009,012,015	Wards	005,006,007,008,009,012
MGA	004,027		013,015,025,027,031,035
Midland.....	032	Yamaha	002,014,016,030,046
Minolta	005,035	Zenith	011,017,026,072
Mitsubishi	004,005,027,035,040		

Laserdisc Player Code List

Pioneer	033	RCA	037
ProScan.....	037		

Satellite Receiver Code List

Chaparral	080,081	STS2	086
Cheyenne	081	STS3	087
Drake	082,083	STS4	088
General Instruments	092,093,094	Toshiba	089
RCA Digital Satellite System	000	Uniden.....	090
Realistic	084	Video Cipher II	091
Sierra I,II,III	081		
STS1	085		

Cable Box Code List

ABC.....	022,046,053,054	Pioneer.....	018,020,044
Anvision.....	007,008	RCA	000,027
Cablestar	007,008	Randtek	007,008
Diamond	056	Regal	003,012,013
Eagle	007,008	Regency	002,033
Eastern Int.....	002	Samsung.....	044
General Instrument*.....	046	Sci. Atlanta *	003,022,035,063,064
GI 400*	004,005,015,023	Signature	046
	024,025,030,036	Sprucer	027
Hamlin.....	003,012,013,034,048	Starcom.....	046
Hitachi	037,043,046	Stargate 2000.....	058
Jerrold*	004,005,015,023,024,025	Sylvania.....	011,059
	030,036,045,046,047,062,065	Teknika.....	006
Macom.....	037,043	Texscan.....	010,011,059
Magnavox	007,008,019,021,026	Tocom.....	017,021,049,050,055
	028,029,032,033,040,041	Unika	031,032,041
NSC.....	009	Universal.....	051,052,060
Oak*	001,016,038	Viewstar	007,008,019,021,026,028
Oak Sigma.....	016		029,032,033,040,041
Panasonic	003,027,039,061	Warner Amex.....	044
Philips.....	007,008,019,021,026,028	Zenith*	014,042,057,061
	029,032,033,040,041		

TV/VCR Combinations

Use TV or VCR codes listed for your brand to operate your TV/VCR combo unit.

*** See special notes on page 11.**

Audio Equipment Code List

ADS		ONKYO	
AMP	001	AM/FM	082
AIWA		CD	078
CD	060	TAPE	080,081
AKAI		PHONO	079
AMP	002,008	PANASONIC	
DENON		AMP	012
CD	057	AM/FM	038
DYNAMIC BASS		CD	036,083
AM/FM	029	TAPE	037
CD	025	PHILLIPS	
TAPE	026,027	AMP	062
PHONO	028	AM/FM	062
EMERSON		CD	061
CD	066	PIONEER	
FISHER		AMP	014
AMP	023	AM/FM	042
CD	067	CD	039
HITACHI		TAPE	040,041
CD	063	RCA	
JVC		AMP	024
AMP	016,058	AM/FM	003
AM/FM	030,035	CD	007,043,044
CD	032	TAPE	006
TAPE	033,034	PHONO	005
AUX	031	AUX	004,054
KENWOOD		REALISTIC	
AMP	017,074	CD	063,066
AM/FM	074	SANSUI	
CD	067,070,077	CD	045
TAPE	071,072	SCOTT	
PHONO	073	CD	066
KYOCERA		TAPE	055,056
AMP	009	SHERWOOD	
LOTTE (NEC)		AMP	011,013
CD	075	SONY	
MAGNAVOX		AMP	021
AMP	065	AM/FM	049
AM/FM	065	CD	046
CD	061	TAPE	048,053
MARANTZ		PHONO	047
AMP	022,076	TEAC	
AM/FM	076	AMP	010
CD	068	CD	069
MITSUBISHI		TECHNICS	
AMP	015,059	AM/FM	052
AM/FM	059	CD	050
NAKAMICHI		TAPE	051
AMP	020	YAMAHA	
		AMP	018,019

RCA HOME THEATRE™

THE ULTIMATE SIGHT AND SOUND EXPERIENCE IN YOUR OWN HOME

UNIVERSAL REMOTE Multi-Brand use

■ WORKS UP TO 5 VIDEO AND AUDIO COMPONENTS:

More versatile than competitive models. Replace up to 5 remote controls... 1 TV, 1 VCR, 1 VCR or Laser Disc Player, 1 Cable Box or Satellite Receiver and 1 Audio Component. Specially designed for home theatre. See the extensive brand list for coverage.

■ CODE SEARCH:

Makes set-up easy. Scans the entire code library to find the right code for your TV, VCR, Cable Box, Satellite Receiver, Laser Disc Player or Audio Component at the touch of a button.

■ ADVANCED PIP & MENU CONTROLS:

Control picture-in-picture and menu functions not available on most remotes.

■ DBS SATELLITE SYSTEM COMPATIBLE:

Preprogrammed to work with the Digital Satellite System.

■ TOLL-FREE CONSUMER HELPLINE:

1-800-316-8756
A customer service representative is ready to help with questions.

Requires 4 AAA Batteries
(Not Included)

THIS SYSTEMLINK™ 5AV
REMOTE CONTROL IS
COMPATIBLE WITH MOST
OF THE FOLLOWING BRANDS
(of infrared controlled components manufactured after 1989):

TV

A-Mark	Dimensia	Novabeam	Philips	Soundesign
Admiral	Electrohome	KTV	Pioneer	Sylvania
Akai	Emerson	Loewe	Portland	Symphonic
Amtron	Envision	Luxman	ProScan	Tatung
Anam National	Fisher	LXI	Proton	Technics
AOC	Funai	Magnavox	Quasar	Techwood
Bell & Howell	GE	Marantz	Radio Shack	Teknika
Candle	Goldstar	Memorex	RCA	Telecaption
Citizen	Hallmark	MGA	Realistic	TMK
Colortyme	Hitachi	Mitsubishi	Sampo	Toshiba
Concerto	Infinity	MTC	Samsung	Universal
Contec/Cony	JBL	Multivision	Sanyo	Victor
Craig	Jensen	NAD	Scott	Vidtech
Curtis Mathes	JVC	NEC	Sears	Wards
CXC	Kawasho	Panasonic	Sharp	Yamaha
Daewoo	Kenwood	Penney	Signature	Zenith
Daytron	Kloss	Philco	Sony	

VCR

Admiral	Emerson	MEI	ProScan Δ	Tatung
Aiwa	Fisher	Memorex	Quartz	Teac
Akai	Funai	MGA	Quasar	Technics
Audio	GE	Midland	RCA Δ	Teknika
Dynamics	Goldstar	Minolta	Radio Shack/	Toshiba
Bell & Howell	Harman	Mitsubishi	Realistic	Totevision
Broksonic	Kardon	Montgomery	Samsung	TMK
Candle	Hitachi	Ward	Sansui	Unitech
Canon	Instant Replay	MTC	Sanyo	Vector
Capehart	JCL	Multitech	Scott	Research
Citizen	JCPenney	NEC	Sears	Victor
Colortyme	JVC	Panasonic	Sharp	Video
Craig	Kenwood	Pentax	Shintom	Concepts
Curtis-Mathes	KLH	Pentax-	Signature	Videosonic
Daewoo	Lloyd	Research +	Sony	Wards
dbx	Logik	Philco	Sylvania	Yamaha
Dimensia	Magnavox	Philips	Symphonic	Zenith
Dynatech	Marantz	Pioneer Δ	Tandy	
Electrohome	Marta	Portland	Tashiko	

Cable Box

ABC	GI 400	Oak Sigma	Samsung	Teknika
Anvision	Hamlin	Panasonic	Sci. Atlanta	Texscan
Cablestar	Hitachi	Philips	Signature	Tocom
Diamond	Jerrold	Pioneer	Sprucer	Unika
Eagle	Macom	RCA	Starcom	Universal
Eastern Int.	Magnavox	Randtek	Stargate	Viewstar
General	NSC	Regal	2000	Warner
Instruments	Oak	Regency	Sylvania	Amex
				Zenith

Audio

ads	Fisher	Magnavox	Philips	Sherwood
Aiwa	Hitachi	Marantz	Pioneer	Sony
Akai	JVC	Mitsubishi	RCA	Teac
Denon	Kenwood	Nakamichi	Realistic	Technics
Dynamic Bass	Kyocera	Onkyo	Sansui	Yamaha
Emerson	Lotte (NEC)	Panasonic	Scott	

Satellite Receiver

Chapparral	Digital Satellite System	Realistic	STS3	Uniden
Cheyenne	General Instruments	STS1	STS4	Video Cipher II
Drake	Sierra I, II, III	STS2	Toshiba	

Δ = Also works Laser Disc Player Brands

© 2000 Thomson Consumer Electronics, Inc.
2000 Clements Bridge Road
Deptford, NJ 08096-2088

Trademark(s) ® Registered Marca(s) Registrada(s)

Made in Mexico

PRCU500 Rev0600

Printed and Packaged in the USA

RCU500



0 179000 30339 8